

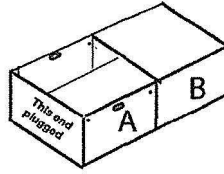


# Standard RETRO FIT with PLUG BACK BOX INSTALLATION

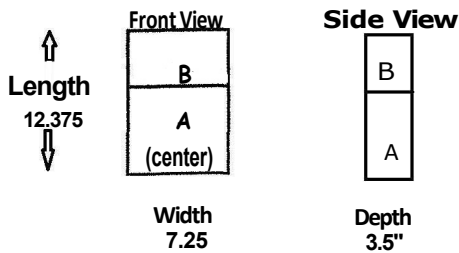

Note: Verify Branch Circuit routing to desired fixture location prior to beginning installation


## STEP #1

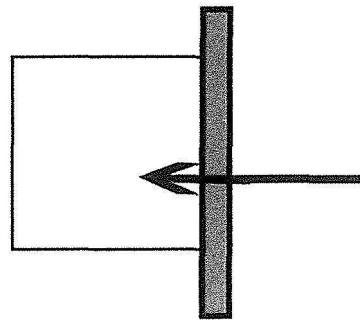

Existing stud, joist or dedicated blocking for mounting the backbox


Provide an opening of 7.25" high and 7.25" wide at desired fixture location.

## STEP#2

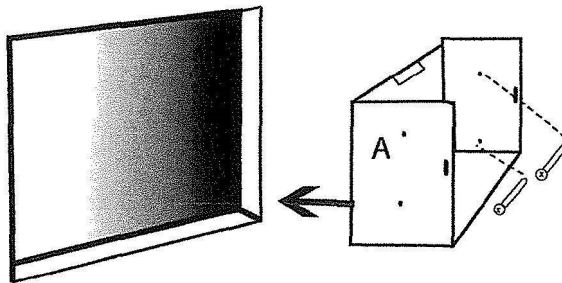

Insert the center section of the retro back box into the existing ceiling or wall opening and fasten to stud with (2) #8-32 x 1" mounting screws (not included).

## STEP#3

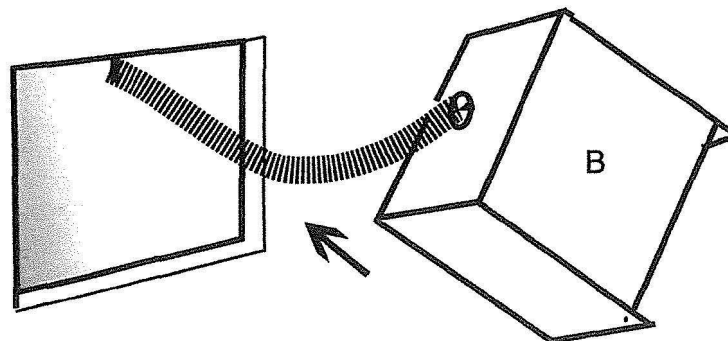

Insert top (power) section of back box after connecting to branch circuit conduit raceway. Slide the slot at bottom of power section onto tab of center section. Then install (2) #6-32 x 1/2" (not included) mounting screws to center section of back box.

**When fully assembled, insert fixture head per standard directions.. Assure that spacers are installed according to directions and tighten fixture head evenly on each side..**